

Change Password

Applies to: 6400, 8400 appliances

Change the password for the root account as soon as possible. The factory default credentials are published in documentation; they are public knowledge and thus not secure.

Access by navigating to **Configuration|Users**. Illustration 1 provides a reference.

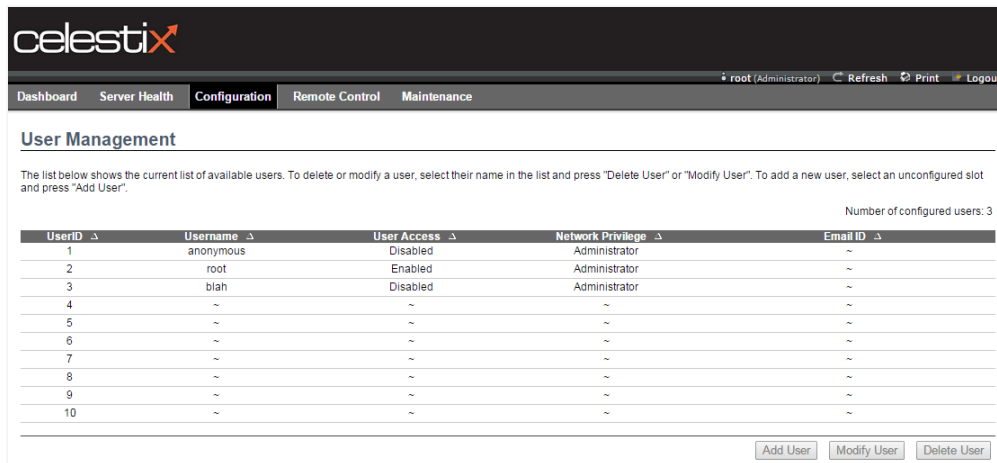


Illustration 1: Modify User Screen

Change root account password

1. Navigate to **Configuration|Users**.
2. Select **root**.
3. Click **Modify User**.
4. Complete the following:
 - a. **Change Password** – select.
 - b. **Password Size** – select a maximum length.
 - c. **Password** – enter and confirm the new password.
Requirements: 4 character minimum that can include:
a-z A-Z 0-9 []~!@#()_ { } . * ^ % \$
 - d. Click **Modify**.
5. Confirm the successful notification prompt.