


## IP Address

Applies to: 6400, 8400 appliances

A separate, static IP address is required for IPMI access. The address is initially configured through the front panel controls:

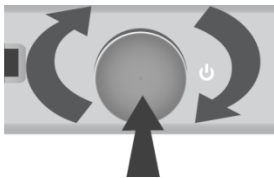

Note: Physical access to the appliance is required to set the IP address.

### To set the IP

Important: In the configuration below, while setting a default gateway is an option, providing access to the Internet may pose a security risk and is not recommended.

1. On the appliance front panel, press the Jog Dial and scroll to **> Configure IPMI <**.
2. Press the Jog Dial again to select.
3. Enter the IP address:
  - a. Press the Jog Dial to edit the first octet of the IP address.
  - b. Turn the dial to change the number.
  - c. Press the Jog Dial again to complete the entry.
  - d. Repeat for the remaining octets.
4. Scroll to and select **[ Next ]** to continue.
5. Enter a **Netmask**.
6. Enter the **Default Gateway** if needed for the deployment.

Note: If entering a default gateway, the value must be within the entered subnet mask; a value outside the netmask will cause an error.

7. Scroll to and select **[ Proceed to Configure ]** to save. The Configure IPMI screen displays when the process has completed.
8. Scroll to **> Back <** and select to return the front panel display to idle mode.

## Instruction Set (continued)

Subsequent changes to the IP address or network information can be managed through the UI (**Configuration|Network**).